

# COOLING FAN RESISTOR

## ON-VEHICLE INSPECTION

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

**CAUTION:**

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. REMOVE COOLING FAN RESISTOR

3. INSPECT COOLING FAN RESISTOR

(a) Measure the resistance between the terminals.

**Standard resistance:**

**1.17 to 1.43  $\Omega$  at 20°C (68°F)**

If the result is not as specified, replace the resistor.

4. INSTALL COOLING FAN RESISTOR

5. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

