


IGNITION COIL COMPONENTS

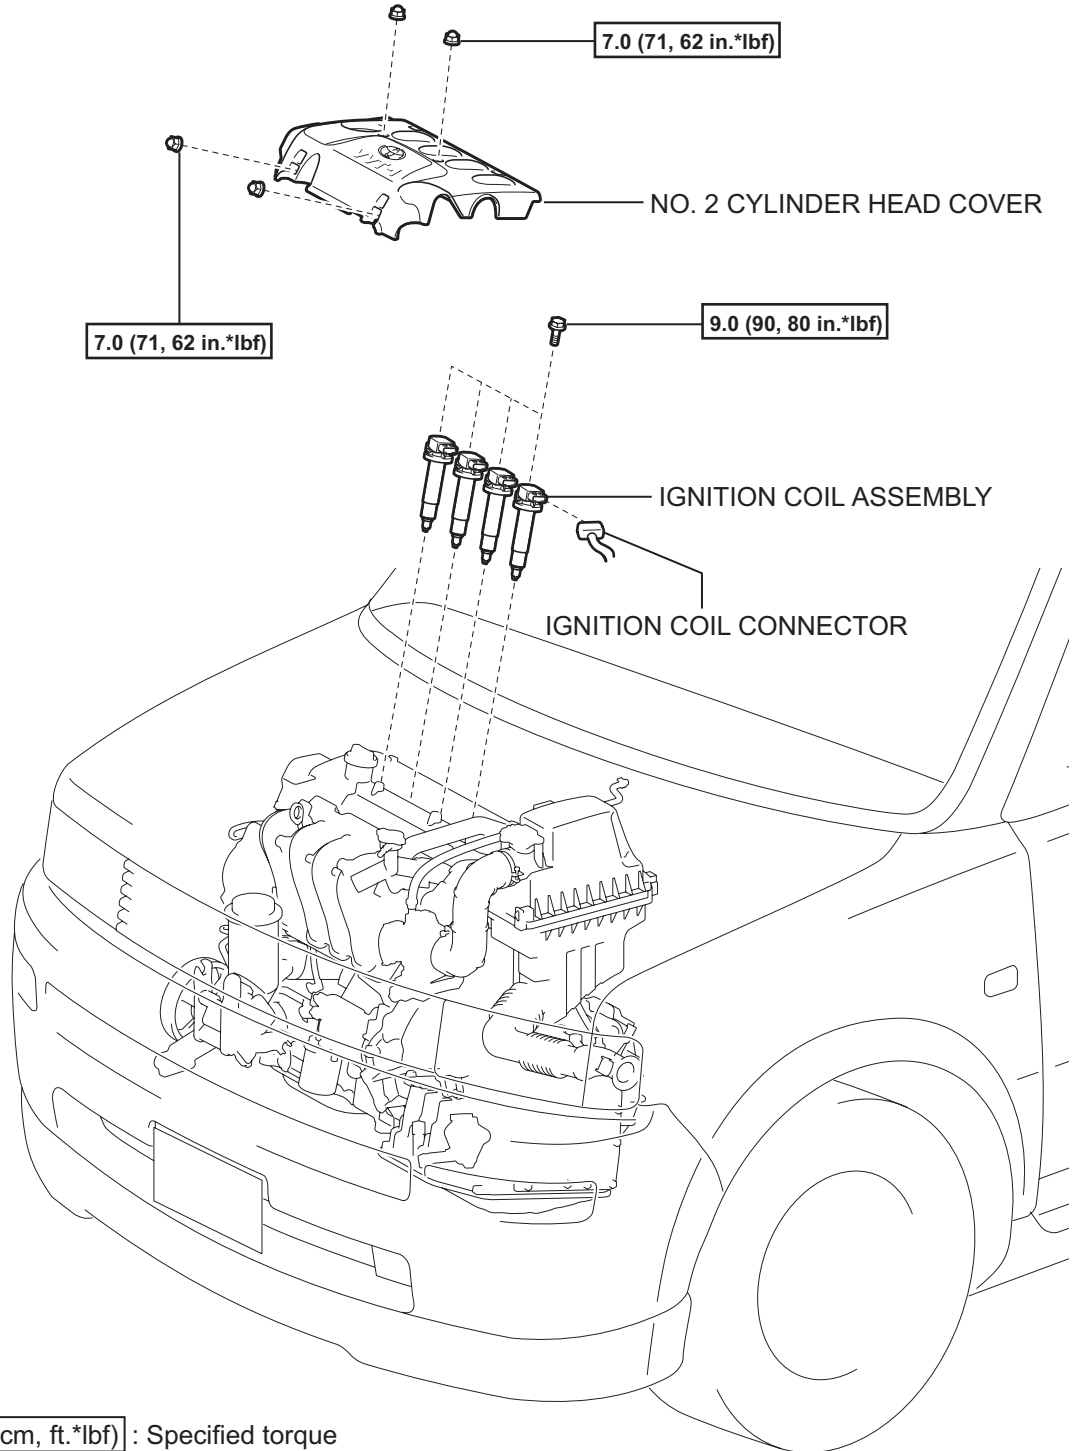

IG

REMOVAL

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**


CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. **REMOVE NO. 2 CYLINDER HEAD COVER**
 - (a) Remove the 4 cap nuts and head cover.

3. **REMOVE IGNITION COIL ASSEMBLY**

- (a) Disconnect the 4 ignition coil connectors.
- (b) Remove the 4 bolts and pull out the 4 ignition coils.

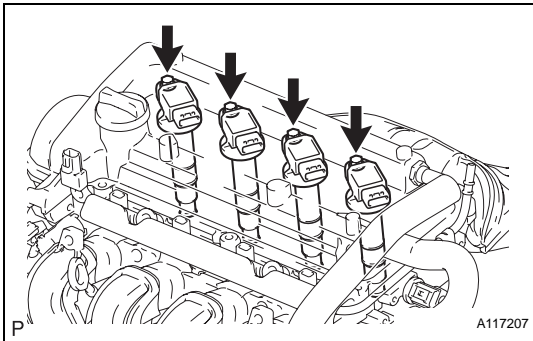

INSTALLATION

1. **INSTALL IGNITION COIL ASSEMBLY**

- (a) Install the 4 ignition coils with the 4 bolts.
Torque: 9.0 N*m (90 kgf*cm, 80 in.*lbf)
- (b) Connect the 4 ignition coil connectors.

2. **INSTALL NO. 2 CYLINDER HEAD COVER**

- (a) Install the head cover with the 4 cap nuts.
Torque: 7.0 N*m (71 kgf*cm, 62 in.*lbf)

3. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**

