


ENGINE

GENERAL MAINTENANCE

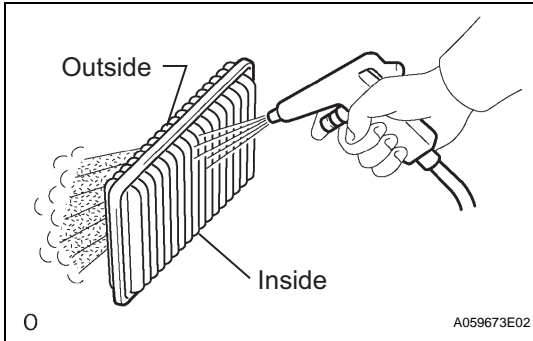

1. **INSPECT DRIVE BELT** (See page [EM-6](#))
2. **REPLACE SPARK PLUGS**
 - (a) Check the spark plugs (see page [IG-5](#)).
3. **INSPECT AIR CLEANER FILTER**
 - (a) Remove the air filter.
 - (b) Visually check that the air filter is not excessively damaged or oily. If necessary, replace the air filter.
 - (c) Reinstall the air filter.
 - (d) Clean the filter with compressed air.

HINT:
First blow from the inside of the filter thoroughly, and then repeat from the outside.
4. **REPLACE AIR CLEANER FILTER**
 - (a) Replace the air filter with a new one.
5. **REPLACE ENGINE OIL AND OIL FILTER** (See page [LU-1](#))
6. **REPLACE ENGINE COOLANT** (See page [CO-1](#))
7. **INSPECT GASKET IN FUEL TANK CAP** (See page [EC-6](#))
8. **INSPECT FUEL LINES AND CONNECTIONS, FUEL TANK VAPOR VENT SYSTEM HOSES**
 - (a) Visually check the fuel lines for cracks, leakage, loose connections, deformation.
9. **INSPECT EXHAUST PIPES AND MOUNTINGS**
 - (a) Visually check the pipes, hangers and connections for severe corrosion, leaks or damage.
10. **INSPECT VALVE CLEARANCE** (See page [EM-10](#))