

FOG LIGHT RELAY

REMOVAL

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.


2. REMOVE FOG LIGHT RELAY

INSPECTION

1. INSPECT FOG LIGHT RELAY

(a) Measure the resistance of the relay.

Standard resistance

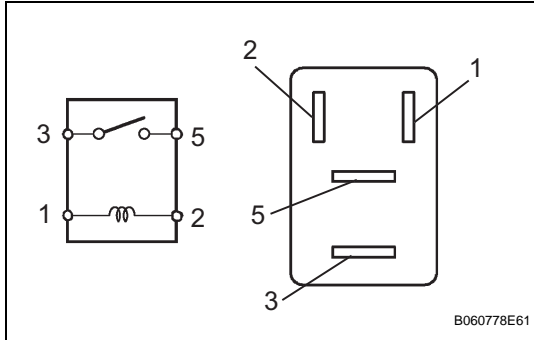

B060778E61

Tester Connection	Specified Condition
3 - 5	10 kΩ or higher
3 - 5	Below 1 Ω (When battery voltage is applied to terminals 1 - 2)

INSTALLATION

1. INSTALL FOG LIGHT RELAY
2. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

