

OUTER MIRROR SWITCH

INSPECTION

1. INSPECT OUTER MIRROR SWITCH ASSEMBLY

- (a) Select L on the left/right adjustment switch:
Measure the resistance of the switch.

Standard resistance (Left side)

Tester Connection	Switch Condition	Specified Condition
4 (VL) - 8 (B) 6 (M+) - 7 (E)	UP	Below 1 Ω
4 (VL) - 7 (E) 6 (M+) - 8 (B)	DOWN	
5 (HL) - 8 (B) 6 (M+) - 7 (E)	LEFT	
5 (HL) - 7 (E) 6 (M+) - 8 (B)	RIGHT	

If the result is not as specified, replace the switch assembly.

- (b) Select R on the left/right adjustment switch:
Measure the resistance of the switch.

Standard resistance (Right side)

Tester Connection	Switch Condition	Specified Condition
3 (VR) - 8 (B) 6 (M+) - 7 (E)	UP	Below 1 Ω
3 (VR) - 7 (E) 6 (M+) - 8 (B)	DOWN	
2 (HR) - 8 (B) 6 (M+) - 7 (E)	LEFT	
2 (HR) - 7 (E) 6 (M+) - 8 (B)	RIGHT	

If the result is not as specified, replace the switch assembly.

