



## WASHER MOTOR

### ON-VEHICLE INSPECTION

#### 1. INSPECT WASHER MOTOR

##### HINT:

This check should be performed with the windshield washer motor and pump installed to the washer jar.

- (a) Fill the washer jar with washer fluid.
- (b) Check the motor (front side)
  - (1) Connect the battery's positive (+) lead to terminal 2 of the washer motor and pump, and the negative (-) lead to terminal 1.
  - (2) Check that washer fluid flows from the washer jar.

##### OK:

**Washer fluid flows from washer jar.**

**If the result is not as specified, replace the washer motor and pump assembly.**

- (c) Check the motor (rear side)
  - (1) Connect the battery's positive (+) lead to terminal 2 of the washer motor and pump, and the battery negative (-) lead to terminal 3.
  - (2) Check that washer fluid flows the washer jar.

##### OK:

**Washer fluid flows from washer jar.**

**If the result is not as specified, replace the washer motor and pump assembly.**